

omniFlow<sup>SERIES</sup>

**elit**  
electronics

# AUREA

EN

BLADELESS TOWER HEATER & FAN  
INSTRUCTION MANUAL

[elit-electronics.com](http://elit-electronics.com)



THIS PRODUCT IS ONLY SUITABLE FOR WELL-INSULATED SPACES  
OR OCCASIONAL USE.

## **SAFETY INSTRUCTIONS**

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

**PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.**


**WARNING** - to reduce the risk of fire, electrical shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing (such as plastic bags)
4. Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
5. Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
6. Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
8. Ensure the cord is fully extended before use and arrange it so that it is not in contact with any part of the heater.
9. In use, some parts of the heater are hot. When moving, hold the heater only by the handle provided.
10. Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
11. Do not use near or point the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 metre from the front and sides, and from the rear of the heater.
12. Do not place the cord under carpet or cover with throw rugs or furniture. Arrange the cord so that it cannot be tripped over.
13. The unit is also fitted with a tip over switch. Do not use on thick and long pile carpets, as the heater may not work, due the tip over switch not been activated.

14. To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
15. This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
16. Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
17. A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
18. Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur.
19. Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
20. Do not use the appliance for other than its intended use.
21. Do not use outdoors. **FOR INDOOR USE ONLY.**
22. Do not leave the appliance unattended when switched on.
23. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc. Do not cover the unit when in operation.
24. Do not locate the heater immediately below a socket-outlet.
25. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
26. This product is intended for normal domestic/household use only.
27. Use this heater as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.

## KNOW YOUR HEATER


### PRODUCT STRUCTURE

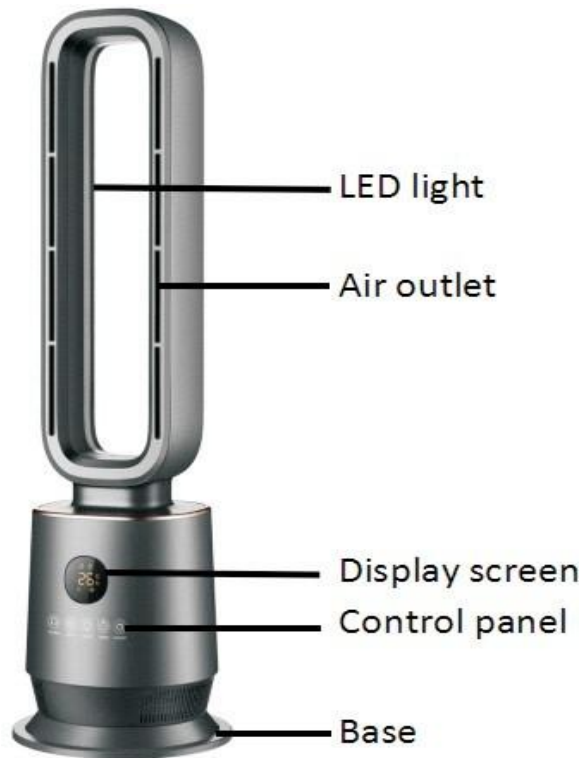

### REMOTE CONTROL



### DISPLAY SCREEN

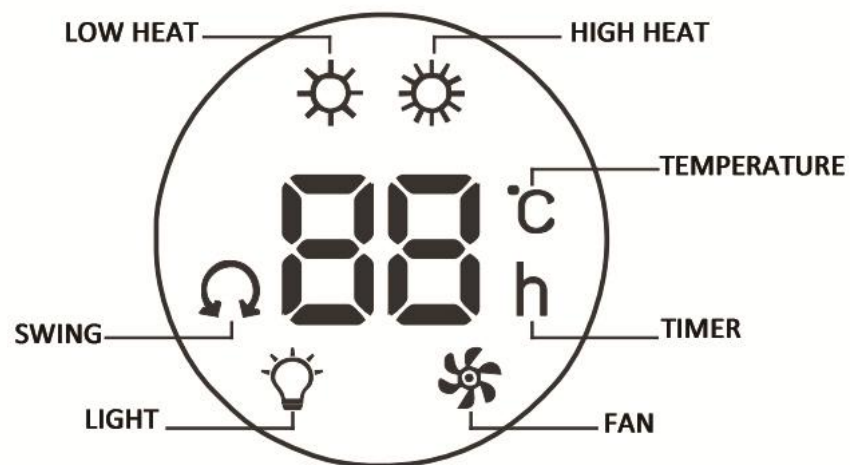

## HOW TO OPERATE

### ON/OFF

Press the ON/OFF button to Switch off or Switch on the power supply.

### HEAT

Press the HEAT button, to choose Low Heat and High Heat

When the appliance is working at high heat, press the button one more time, the appliance will work at fan speed.

### TIMER

Press TIMER button repeatedly to increase the running time in 1 hour intervals. The timer can be set between 1 hour and 12 hours. The display will show the duration currently set to, the number of hours selected will show on the digital display. To cancel the timer function, press the timer button until 00 is shown.

### SWING

Press SWING button to turn the Swing function on and off. When it is operational the horizontal direction of the airflow is slowly moved from side to side.

### LIGHT

Press LIGHT button to turn the LED light ON.

Press again to cycle 7 different LED light colours till to turn the LED light OFF.

### TEMP (only available on REMOTE CONTROL)

Press TEMP button repeatedly to choose the desired room temperature. The setting temperature increase 1°C by each pressing TEMP button, the temperature adjustable range is 16~36°C. When the desired temperature has been reached the unit will change into fan mode.

## REPLACING THE BATTERIES

Remote control operations are identical to the functions of the product control panel except for the temperature function. The remote control supplied with this heater uses 2 x AAA batteries.

## STORAGE AND MAINTENANCE

1. Turn off the power and unplug the power before cleaning.
2. After the product is completely cooled, wipe the outer surface with a soft cloth, and use a soft brush to clean the ventilation holes.
3. After cleaning, until the product is completely dried, it can be used by electricity or put into the original packaging and placed in a dry and ventilated place for proper storage.
4. Do not rinse directly with water during the cleaning process to avoid damage to the machine.
5. Avoid using a thinner, toluene, acidic detergent, alcohol and other chemical agents to wipe the product.

## SPECIFICATION


Model: AUREA  
Voltage: 220-240V~  
Frequency: 60 Hz  
Power: 1000-2000W  
Temperature range: 16-36°C

## **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Take the packaging material to a designated municipal waste facility.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling,  take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### **Disposal in Other Countries Outside the European Union**

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

Model identifier(s): ELIT AUREA					
Item	Symbol	Value	Unit	Item	Unit
<b>Heat output</b>				<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
Nominal heat output	P <sub>nom</sub>	2.0	kW	manual heat charge control, with integrated thermostat	[NO]
Minimum heat output (indicative)	P <sub>min</sub>	1.0	kW	manual heat charge control with room and/or outdoor temperature feedback	[NO]
Maximum continuous heat output	P <sub>max,c</sub>	2.0	kW	electronic heat charge control with room and/or outdoor temperature feedback	[NO]
<b>Auxiliary electricity consumption</b>				Fan assisted heat output	[NO]
At nominal heat output	el <sub>max</sub>	0.000	kW	<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	el <sub>min</sub>	0.000	kW	single stage heat output and no room temperature control	[NO]
In standby mode	el <sub>sb</sub>	0.0007	kW	Two or more manual stages, no room temperature control	[NO]
				with mechanic thermostat room temperature control	[ NO ]
				with electronic room temperature control	[YES]
				electronic room temperature control plus day timer	[NO]
				electronic room temperature control plus week timer	[NO]
				<b>Other control options (multiple selections possible)</b>	
				room temperature control, with presence detection	[NO]
				room temperature control, with open window detection	[NO]
				with distance control option	[NO]
				with adaptive start control	[NO]
				with working time limitation	[NO]
				with black bulb sensor	[NO]
Contact details	Tehno-Mag d.o.o., Slavonska avenija 53, 10000 Zagreb, Croatia				