

omniHeat<sup>SERIES</sup>

**elit**  
electronics

# TORRE

EN

PTC TOWER HEATER  
INSTRUCTION MANUAL

[elit-electronics.com](http://elit-electronics.com)



**PLEASE SAVE THESE INSTRUCTIONS**

THIS PRODUCT IS ONLY SUITABLE FOR WELL-INSULATED SPACES OR  
OCCASIONAL USE

## SAFETY INSTRUCTION

Read ALL instructions before using this unit.

 
 
 
1. **CAUTION:** Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
2. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
3. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 100cm from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
4. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
5. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
7. DO NOT touch the control panel or plug with a wet hand.
8. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
11. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
12. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
13. To avoid fire or shock hazard, plug the unit directly into a 220-240 V AC electrical outlet.
14. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
15. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
16. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.

17. Always use on a dry, level surface. Use on floor only.
18. DO NOT use outdoors.
19. **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
20. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
21. Do not use this heater with a programmer , timer or any other device that switches the heater on automatically.
22. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
23. Heater is not located immediately below a socket-outlet.
24. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
25. Do not throw the appliance in dustbin with wheels. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.
26. In order to avoid overheating, do not cover the heater.
27. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
28. Children of less than 3 years should be kept away unless continuously supervised.
29. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
30. **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
31. **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.


## INSTALLATION INSTRUCTION

Base installation instructions: (Please confirm whether the accessories are complete and the product is in good condition before use.)


1. **Base Assembly:** Take out the two parts of the base from the packaging box, align the two parts and assemble them into one base. (As shown in Figure 1)
2. **Installation of the Body and Base:** Invert the machine body with the bottom facing upwards, align the positioning holes of the assembled base with the positioning posts at the bottom of the heater as shown in the diagram, then secure it in place. Use the screws provided in the packaging to fix the base. (As shown in Figure 2)
3. Place the heater in an upright position to complete the installation. (As shown in Figure 3)

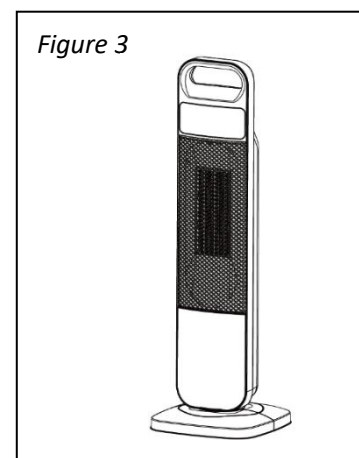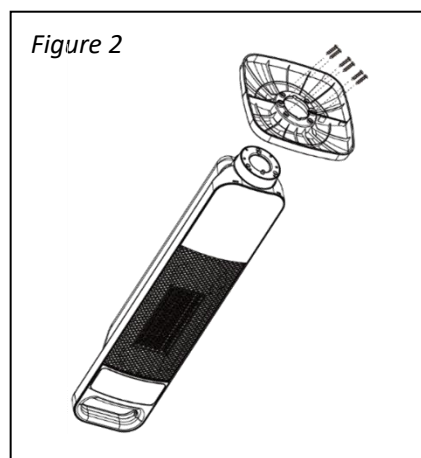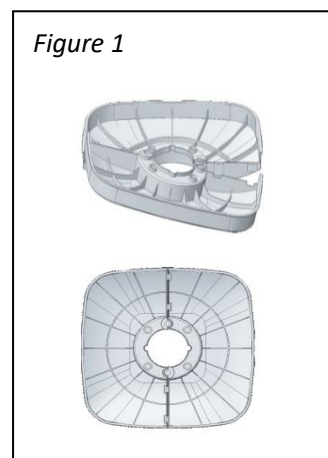

## PRODUCT STRUCTURE

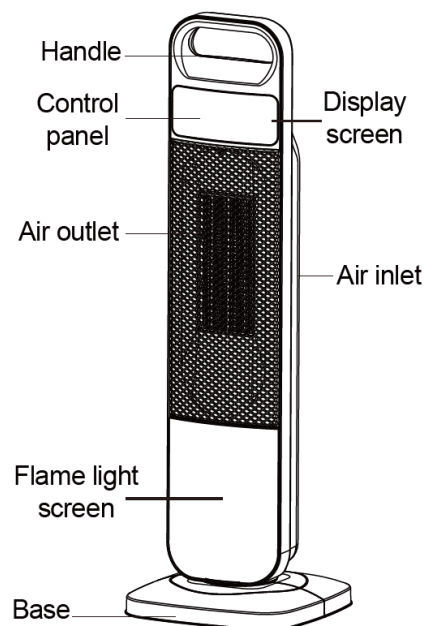 

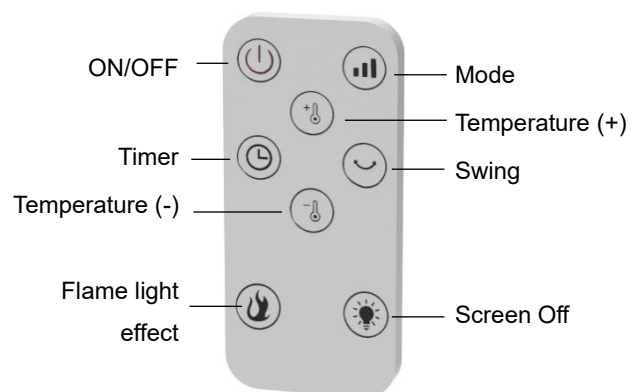 

## REMOTE CONTROL





## OPERATION INSTRUCTION


1. Plug the power cord into the power socket, the display screen shows the ambient temperature.


2.  **ON/OFF:** Press this button while the heater is off to start the fan. To stop the heater, press the button again, all functions will be off and the heater will enter standby mode. During heating, the fan will delay for 30 seconds before the heater switches to standby.


3.  **MODE:** Press the button repeatedly to choose between the three available modes, Fan, Low heat and High heat.

4.  **TIMER:** This button is only available on remote control. Press it to set an auto-shutdown timer (1–24 hours). Each press increases the time by 1 hour. After reaching 24 hours, pressing again cancels the timer.

5.  **TEMPERATURE SETTING:** These two buttons are only available on remote control. Press these two buttons repeatedly to increase/decrease for temperature setting, each press increases/decreases the setting temperature by 1 °C. The default setting temperature is 28 °C. Press this button to adjust the temperature, with a range of "15 °C -38 °C".

6.  **SWING:** Press this button to activate left-right oscillation for wider airflow distribution.

7.  **FLAME:** Press it to turn the flame light effect on or off.

8.  **SCREEN OFF:** This button is only available on remote control. Press it to turn off all display lights on the heater.

## STORAGE AND MAINTENANCE

1. Turn off the power and unplug the power before cleaning.
2. After the product is completely cooled, wipe the outer surface with a soft cloth, and use a soft brush to clean the ventilation holes.
3. After cleaning, until the product is completely dried, it can be used by electricity or put into the original packaging, and placed in a dry and ventilated place for proper storage.

4. Do not rinse directly with water during the cleaning process to avoid damage to the machine.
5. Avoid using a thinner, toluene, acidic detergent, alcohol and other chemical agents to wipe the product.

#### TECHNICAL DATA:

Product	PTC TOWER HEATER
Model Number	TORRE
Wattage (W)	2000W
Voltage (V)	220-240V 50Hz
Dimensions (mm)	720x195x170
Class	II
Waterproof Rating	IPX0

#### INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

#### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

Model identifier(s): ELIT TORRE					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat output/room temperature control (select one)	
Nominal heat output	P <sub>nom</sub>	2.0	kW	single stage heat output and no room temperature control	[no]
Minimum heat output (indicative)	P <sub>min</sub>	1.35	kW	two or more manual stages, no room temperature control	[no]
Maximum continuous heat output	P <sub>max,c</sub>	2.0	kW	with mechanic thermostat room temperature	[no]
Power consumption				with electronic thermostat room temperature	[yes]
In off mode	P <sub>o</sub>	NA	W	electronic room temperature control plus day timer	[no]
In standby mode	P <sub>sm</sub>	0,40	W	electronic room temperature control plus week timer	[no]
In idle mode	P <sub>idle</sub>	0.40	W	Other control options (multiple selections possible)	
In network standby	P <sub>nsm</sub>	NA	W	room temperature control, with presence detection	[no]
Standby mode with display of information or status			[YES]	room temperature control, with open window detection	[no]
Seasonal space heating energy efficiency in active mode	η <sub>s,on</sub>	91.5	%	distance control option	[no]
				adaptive start control	[no]
				working time limitation	[yes]
				black bulb sensor	[no]
				self-learning functionality	[no]
				control accuracy	[no]
Contact details	Tehno-Mag d.o.o., Slavonska avenija 53, 10000 Zagreb, Croatia				