



220-240V,50-60Hz,1800-2200W

Suitable for family use

This product is an electric heating appliance. For your safety and convenience, please read this User Manual carefully and follow the steps. Please keep it for future reference.

WARNING

Please observe the following safety precautions before using this product.

GENERAL SAFETY WARNING:

Basic safety precautions, including the following, should always be followed when using electrical appliances:

1. Read all instructions and retain for reference.
2. Do not touch hot surfaces directly. Use handles or knobs.
3. Do not intrude the cord, plug or body into water or other liquids to prevent electric shock. You can scrub the body with a damp cloth and make sure the appliance cools down completely before cleaning.
4. Children need to be closely supervised any time they use or are near the appliance.
5. This appliance must not be used by children under 8 years of age, persons with physical, sensory, or mental ability deficiencies, or persons who lack experience and knowledge of its use, unless they have been supervised or instructed in the use of the appliance by a person responsible for their safety and who understands the hazards.
6. Children under 8 years of age should not clean or maintain this product unless they are over 8 years of age and are supervised.
7. Keep this product and its power cord out of the reach of children.
8. Children should be supervised to ensure they do not play with the appliance.
9. Never leave the product working unattended
10. Appliances should be unplugged from the socket when not in use and before cleaning, and parts should be put in or taken out after they have cooled down.
11. After the power cord is damaged, the plug is damaged or the appliance malfunctions or is damaged in any other way the product cannot be operated, please return the product to the nearest authorized service point for inspection, repair or commissioning.
12. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similar specialist to avoid danger.
13. It is not recommended to use accessories supplied without the manufacturer's approval, as this may cause injury.
14. For home use only, not for outdoor use. Commercial use is not permitted.
15. This machine is intended for use in domestic appliances and similar places such as:
 - Staff cafeterias in shopping malls, offices or other work environments
 - Farms
 - Residents of hotels, motels or other residential environments
 - Household hotels
16. Do not allow the power cord to hang over the edge of a table or counter or touch a hot surface.
17. All switches should be turned "OFF" and unplugged when disconnecting.
18. Do not use the appliance for other purposes.
19. The appliance cannot be operated by an external timer or a separate remote-control system.
20. Always use the product on a dry and smooth level surface.
21. CAUTION



Risk of burns! The temperature of accessible surfaces may be high when the appliance is operating. Do not touch them.

22. The temperature of the accessible surfaces may become high when the appliance is in operation.
23. Make sure that food in the baking pan or pizza stone does not touch the heating element.
24. Do not cover the air vents and air inlets while the product is working.
25. Do not pour oil into the baking tray as this may cause a fire.
26. Do not touch the inside of the product while it is working.
27. Before connecting the product to the power supply, check that it matches the local supply voltage.
28. It is strictly prohibited to use wet hands to plug or unplug the power supply or operate the control panel.
29. Do not use the product on or near tablecloths, curtains or any other flammable materials.
30. Do not place the product next to walls or other products, and leave at least 10cm of space on the sides, back and top. Do not place any objects on top of the product.
31. When the product is in operation, hot air will come out of the air outlet, so for safety reasons, please keep the user away from the air outlet.
32. If black smoke comes out, unplug the product immediately.
33. The packaging material is not a toy. Children should not play with the packaging plastic bag to avoid choking hazard.
34. During the use of the appliance, there are small drops of water, it is a normal phenomenon.
35. Do not heat powdered food. Clean the food residue, such as flour and other powdered residues inside the cavity before each barbecue to avoid potential explosions.

Use of extension cords

- a) Short power cords are provided to reduce the risk of getting tangled in or tripping over long power cords
- b) Extension cords can be used, and care must be taken when using them.
- c) If an extension cord is used:
 - 1) the power rating marked on the cord set or extension cord should match the power rating of the appliance.
 - 2) the cord should be placed so that it is not dangling over a countertop or tabletop where it could be pulled down by a child or tripped over unintentionally.

BEFORE FIRST USE

- Remove all accessories from the packaging box and read this manual carefully. Please pay special attention to the operating instructions, warnings and important safeguards to avoid any injury or property damage.
- Remove any stickers.
- Wash the accessories in warm soapy water, then rinse and dry thoroughly. The enameled steel baking tray is dishwasher safe. Never clean the main unit in the dishwasher.
- The pizza oven is heated with hot air. Do not pour oil, grease or other liquids into the baking dish.
- Do not overfill the baking tray with food as this will block airflow and reduce cooking results.

Accessories:




Pizza stone



Pizza peel




Enamel baking tray

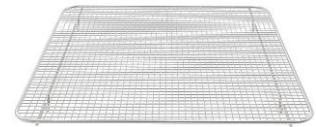

Smoke wire rack

MAIN PARTS

1. Metal housing
2. Handle
3. Glass viewing window
4. Door
5. Base
6. Light icon
7. Control panel
8. Power On/Off button
9. Oven function
10. Time
11. Temperature
12. Pizza function
13. Pizza expert mode
14. Smoke function
15. Start/Stop button

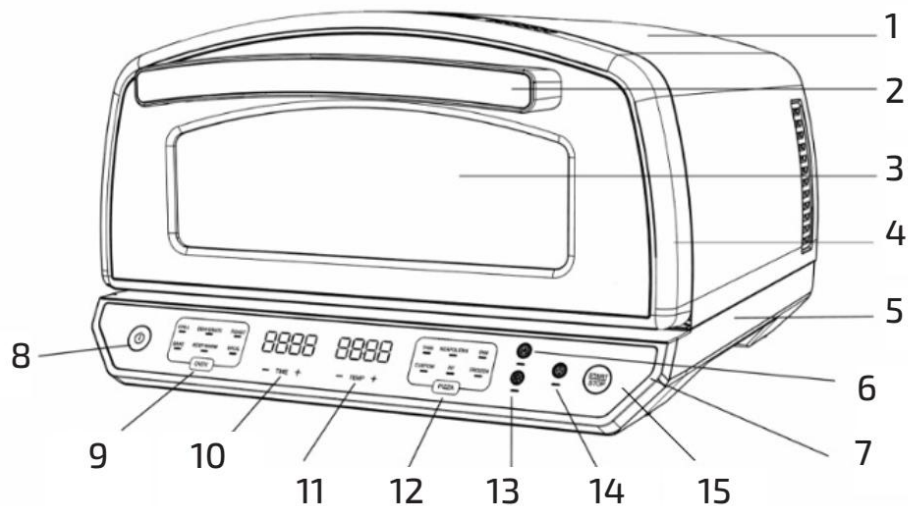

KNOWING YOUR PIZZA MAKER


The control panel shows the time on the left side of the display. The temperature is shown on the right side, either in Celsius (°C) or Fahrenheit (°F), depending on your preference.







Tip: To switch between Celsius and Fahrenheit, press and hold both the “Temp +” and “Temp –” buttons at the same time. The temperature unit on the right display will change accordingly.




FUNCTION BUTTONS







1. OVEN BUTTON

The following oven functions can be selected by touching the  icon:

- **Grill**  - Provides a grilled flavour, creating even grill marks.
- **Dehydrate**  - Dehydrate meats, fruits and vegetables for healthy homemade snacks.
- **Roast**  - Tenderises meats, roasts vegetables and much more.
- **Bake**  - Use it to bake cakes, pastries, desserts and much more.
- **Keep warm**  - To keep food warm to the desired temperature, preserving its good taste.
- **Defrost**  - Suitable for defrosting all types of meat.

2. PIZZA BUTTON

The following pizza functions can be selected by touching the  icon:

- **Thin crust**  - Crispy, thin pizza base — a classic pizzeria style.
- **Neapolitan**  - Puffy, chewy crust with crispy bubbles — artisan-style.
- **Pan**  - Thick, chewy crust made in a deep pan — like Sicilian or Chicago style
- **Custom**  - Set your own time and temperature for a personalized result
- **New York**  - New York, large, handmade pizza with chewy crust.
- **Frozen**  - Fry frozen pizza.
-

OPERATING BUTTONS

POWER ON/OFF

- After plugging in the unit, lightly tap the Power button to turn it on. The power light and display will activate. You can now select a cooking function.
- After cooking, the unit will beep 5 times and display “END.” One minute later, it will enter standby mode.

TEMP +/- BUTTONS

Use these buttons to adjust the cooking temperature:

- Tap to increase/decrease temperature by 5°C.
- Long press (2+ seconds) to change temperature quickly by 10°C.
- Set the temperature after selecting a function, then press START/STOP to begin cooking.

TIME +/- BUTTONS

Use these buttons to adjust the cooking time:

- Tap to change the time by 1 minute.
- Long press (2+ seconds) for faster changes of 5 minutes.
- Set the time after selecting a function, then press START/STOP to begin cooking.

START/STOP

Press START/STOP to begin cooking after choosing a program and adjusting time/temperature.

- During preheat or cooking, press again to pause.
- Press again to resume.
- To change functions during preheat or cooking, press START/STOP to pause first, then choose new function.

PIZZA EXPERT MODE

After selecting a Pizza program, tap the Pizza Expert Mode button to activate this special mode:

- The program runs for a continuous 30 minutes - ideal for making multiple pizzas.
- Note: Time and temperature cannot be adjusted in this mode.
- Pizza Expert Mode is only available when using Pizza functions.

SMOKE FUNCTION

The smoking function adds a natural woodsmoke flavour to your pizzas. To use it, you can follow two methods according to your preferences:

1. Place 15-20 g of wood chips in the enamelled steel baking tray (preferably on the edge of the tray to avoid grease contact and affect the smoking effect during cooking) or use foil for easier cleaning.
Note: Place the ingredients on the tray, making sure that they do not cover the wood chips for proper smoke circulation.



2. Place the wire rack with ingredients on the tray and put inside the pizza maker, press the SMOKE button to wait for your natural wood smoke flavored food.
Tip: Before to proceed the Smoke function, it is better to cook the ingredients semi-mature based on the cooking effect desired, to keep the ingredients taste feeling after the smoke process, avoiding the over-cooked.

STANDBY

The appliance will turn off if there is no interaction with the control panel after 1 minute. The selected function will also be stopped or cancelled if there is no interaction with the control panel after 5 minutes.

TIPS & SPECIAL MODES:

PREHEATING MODE


- Preheating: After selecting the preset programme, press the Start/Stop icon to start cooking, then the appliance will enter the preheating process, and the display will show “PRE”. If you want to skip the preheating process, press and hold the Oven or Pizza icon for seconds. The display will stop showing “PRE” and show the cooking time countdown and the temperature of the selected programme.

Note: The preheating time required depends on the preset temperature. When the cooking temperature reaches the preset temperature, the preheating process will stop and prompt to add food.

- Add food: Once the preheating process is completed, the appliance will beep 10 times, and the display will show “ADD FOOD”. Open the door and place the ingredients, then press the

Start/Stop icon to start the cooking process. During the cooking process, time and temperature can be adjusted by pressing the “+” or “-” icons. After adjusting the time and temperature, the display will flash 5 times before implementing the new settings.

Note: The “ADD FOOD” warning will be shown on the display for 10 minutes. If food is not added and the Start/Stop icon is not pressed, the appliance will turn off automatically.

- **Oven icon:** In standby mode, press the Oven icon to select the following functions: Grill, Dehydrate, Roast, Bake, Keep warm, Defrost.
- **Pizza icon:** In standby mode, press the Pizza icon to select the following functions: Thin & Crispy, Neapolitan, Pan Pizza, New York Style, Frozen Pizza and Custom. The function will operate according to the time and temperature settings.
- **Light icon**  : Press this icon to turn the inner light on/off for better visibility.

COOKING FUNCTIONS

Function	Default Temp	Adjustable temp	Default time	Adjustable Time	Preheat
Thin	310°C	80-400°C	4 min	1-10 min	Yes
Neapolitan	450°C	80-450°C	3 min	1-10 min	Yes
Pan	250°C	80-400°C	14 min	1-20 min	Yes
Custom	200°C	80-350°C	10 min	1-30 min	Yes
New York	285°C	80-400°C	6 min	1-15 min	Yes
Frozen	270°C	80-400°C	10 min	1-20 min	Yes
Grill	300°C	80-300°C	2min	1-15min	Yes
Dehydrate	70°C	60-90°C	6hours	1-12 hours	No
Roast	350°C	80-350°C	8min	1-20min	Yes
Bake	175°C	150-250°C	20min	1-120min	Yes
Keep Warm	60°C	60-100°C	30min	1-120min	No
Broil	200°C	200-300°C	10min	5-20min	No
Smoke	280°C	/	10min	1-15min	NO

CLEAN AND MAINTENANCE

- Unplug the power cord before cleaning the product and allow the unit to cool down completely.
- The inner and outer surfaces of the accessories can be cleaned with soft cotton cloth or sponge with neutral detergent and clean with water.
- Do not use hard brushes or articles for cleaning to avoid damaging the inner surface of the accessories and the protective layer of the accessories.
- Do not use toxic and corrosive cleaning agents such as gasoline, thinners, or polish.
- The cleaned parts must be wiped dry before plugging in.
- Please do not clean the heating tube.
- Do not immerse the product in a liquid such as water.
- The accessories can be taken out and cleaned separately. Please use a soft towel or sponge dipped in a neutral detergent and use the detergent to clean the accessories after each use.

- Wash parts in contact with food by warm soapy water and then dry. Clean the body with a damp cloth and never wash or spill mixer with water. And then use a dry cloth to wipe it again.
- Do not use the abrasive cleaners, metal brushes and sponges, organic solvents or aggressive liquids. Pay attention to the safe use of accessories.

WARNING: Allow the pizza stone and enameled steel tray to cool down completely before washing in warm water to prevent cracking.

TROUBLESHOOTING

Error code	Problem
E1	Top temperature sensor open circuit
E2	Down temperature sensor open circuit

TECHNICAL PARAMETERS

Product: Electric Pizza & Grill oven

Model: Pizzarella Smoke

Rated voltage range: 220–240 V~

Rated frequency: 50–60 Hz

Rated power input: 1800–2200 W

Temperature range: 60–450°C

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points.



Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

