

VC-26B

elit
electronics

EN

2in1 CORDED STICK VACUUM CLEANER
INSTRUCTION MANUAL

elit-electronics.com



IMPORTANT SAFETY INSTRUCTIONS

When using your stick vacuum cleaner basic safety precautions should always be observed, including the following:

Read all instructions before using your stick vacuum cleaner.

WARNING - To reduce the risk of fire, electric shock, or injury:

1. Use the system only for its intended use.
2. To protect against the risk of electric shock, do not immerse any part of the system in water or other liquids.
3. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surfaces.
5. Do not run appliance over cord.
6. Do not operate the system with a damaged cord or plug, or if the appliance or any other part of the system has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the BAGLESS CONVERTIBLE STICK VACUUM CLEANER. Return the unit for examination and repair. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the BAGLESS CONVERTIBLE STICK VACUUM CLEANER is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave the system unattended while connected.
8. Keep hair, loose clothing, fingers and all parts of body away from opening and moving parts.
9. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
10. Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
11. Use extra care when cleaning on stairs.
12. Do not use the vacuum without the dust cup filter in place.
13. This appliance is intended only for household use. Follow all user instructions in this manual.
14. Do not leave the STICK VACUUM CLEANER plugged in when un-attended. Unplug the electrical cord when not in use and before servicing.
15. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
16. Use only as described in this manual. Use only manufacturer's recommended accessories.
17. Do not pull cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
18. Turn off all controls as applicable before unplugging from electrical outlet.


19. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
20. Do not handle plug or vacuum with wet hands or operate without shoes.
21. Do not put any objects into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything else that may reduce air flow.
22. Store your appliance indoors in a cool, dry area.
23. Keep your work area well lit.
24. Do not immerse the vacuum into water or other liquids.
25. Keep end of hose, wands and other openings away from your face and body.
26. Use only on dry surfaces.
27. Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on rating label.
28. This appliance is provided with double insulation. Use only identical replacement parts.

For Household Use Only
SAVE THESE INSTRUCTIONS

WARNING:

- To reduce the risk of injury from moving parts – Unplug before servicing.
- To reduce the risk of injury of electric shock – Unplug before cleaning or servicing.
- To reduce the risk of electric shock – Do not use outdoors or on wet surfaces.

GETTING TO KNOW YOUR STICK VACUUM CLEANER CLEANER

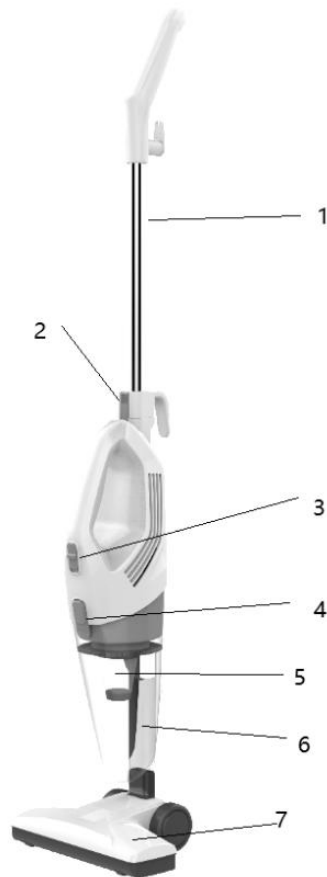

- (1) Tube & Handle
- (2) Release button for the handle
- (3) On/Off Power Switch
- (4) Dust Cup Container Release
- (5) HEPA filter
- (6) Dust tank
- (7) Floor brush

OPERATING INSTRUCTIONS

Note: Always remove the power plug from the wall outlet before assembling or removing accessories.

Inserting the Metal Handle into the Main Body

- On the hand vac handle, pull open the handle port and insert the extension tube until the locking clip is sitting firmly on the handle.
- Push the handle port closed so that it snaps shut.

Attaching the Crevice Tool and the Floor Brush to the Main Body

- Push the crevice tool or floor brush into the suction hole opening.

The following are recommendations for accessory usage:

Crevice Tool

For radiators, crevices, corners, baseboards and between cushions.

Floor Brush

For all kinds of flooring, including carpeted and tiled floors.

Caution: The suction hole opening must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

Power switch

- Push on the power switch to turn on the unit.
- Push on the power switch again to turn off the unit.

Using the Unit as an Upright

- Insert the extension tube into the hand vac.
- Choose the appropriate accessory (crevice tool or floor brush) and attach it to suction hole opening on the hand vac

Using the Unit as a Hand Vacuum

- Disconnect the extension tube from the hand vac by handle release button and remove the extension tube from the hand vac handle. Once the extension tube is removed, snap the handle port shut.

CLEANING & CHANGING THE DUST CUP FILTER

Changing and Cleaning the Dust Cup Filter

In order to achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.

1. To remove the dust cup container, press down on the dust cup container release button and separate the dust cup container from the main unit.
2. Pull out the dust cup filter.
3. Empty the dust from the dust cup container.
4. Rinse the dust cup filter in cold water and then let it air dry for 24 hours before replacing it back in the dust cup container.

Important Note: DO NOT use a washing machine to clean the dust cup filter. Do not use a hair dryer to dry it. **AIR DRY ONLY.**

5. Replace the dust cup filter carefully into the dust cup compartment. **NEVER operate the stick vac without the dust cup filter in place.**
6. Attach the dust cup container to the main body of the unit.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
The suction is poor.	The air inlet is blocked. The dust container is almost full. The Hepa filter is blocked.	Disconnect the attachments and remove the blockage. Empty the dust container and Clean the HEPA filter following the instructions in the section entitled “CLEANING & CHANGING THE DUST CUP FILTER”.
The vacuum cleaner has cut out.	The thermal cut-out device has activated due to restricted airflow around the unit and has cut power to the motor to protect the vacuum cleaner.	Switch off and unplug the vacuum cleaner from the mains power supply. Empty the dust container and clean HEPA filter following the instructions in the section “CLEANING & CHANGING THE DUST CUP FILTER”. Allow the vacuum cleaner to cool for approx.. 1 hour.

TECHNICAL PARAMETER

Model	VC-26B
Rated power	600W
Rated voltage/frequency	220-240V/50Hz
Net weight	1.8kg
Product size	1100x230x180mm

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.