

EPS-26


elit
electronics

EN

PERSONAL SCALE
INSTRUCTION MANUAL

elit-electronics.com

EPS-26B

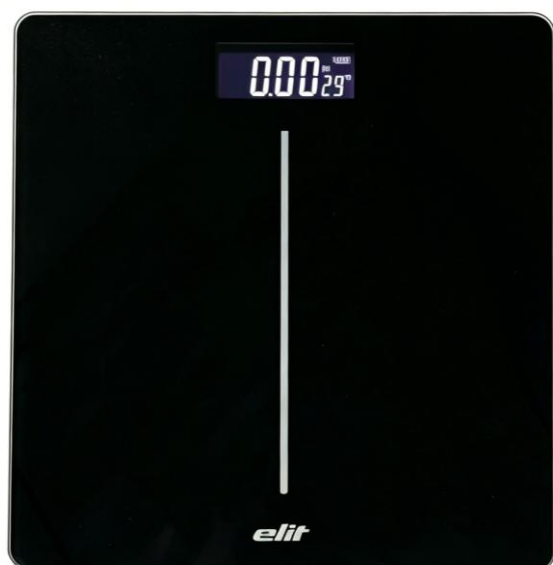

EPS-26WH



IMPORTANT NOTES

- Before operating the appliance, please read the instruction manual and follow the instructions provided. The manufacturer is not liable for any damages resulting from use of the appliance contrary to its intended use or inappropriate use. Keep the instruction manual for future reference.
- The appliance is intended for home use only. Do not use for other purposes contrary to its intended use. Do not use for medical or commercial purposes.
- This appliance may be used by children of at least 8 years of age and by persons with reduced physical, mental abilities and persons with no experience or knowledge of the equipment, if supervised or instructed on its safe use so that the risks associated with it were understandable.
- Children should not play with the appliance nor clean or carry out maintenance of the appliance unattended.
- The scale is a precision device. Do not drop, hit or shake it.
- If the scale is not used for a long time, remove the batteries. Batteries that are flat or out of use for a long time may leak.
- Before stepping on the scale, make sure the platform is dry. The scale can be slippery if its surface is wet.

CAUTION: Slippery when wet.



In order to get the most from your scales, please carefully read and follow the instructions provided.

- Put the scales on a hard flat surface (avoiding carpets or any soft surfaces).
- Gently step on the scales, put your feet evenly on the scales without moving and wait whilst the scales compute weight.

UNIT CONVERTIBLE

- Press the key at the bottom of the scale, then you can change units between kg/lb.

AUTOMATIC SWITCH OFF

 
- When you step off the scales, it will automatically switch Off (if no weighing is carried out while the zero is being displayed, the scales will automatically switch themselves off after approximately 7 seconds).

OVERLOAD INDICATOR

- When the scales are overloaded (over 180kg), the “OL” will appear on the screen.

BATTERY CHANGE INDICATOR

- When the batteries need replacing, following will appear on the screen :



Please open the back board of the scales, then take the batteries carefully out of the battery compartment. Please push the metal sheet outwards by your finger nails or a sharp instrument. The battery will pop up. Do not bend the contacts back while you do this, or they may break. Dispose of the old batteries in a safe place. Do not place on fire.

POWER SUPPLY

- Batteries are not included (2x AAA battery). Please remove the insulation sheet from the battery contacts before using. Replace the batteries when the “Low Battery Indicator” shows.

MAINTENANCE AND CARE

- Placing you scales on a hard flat surface will ensure the greatest accuracy and repeatability.
- Always weigh yourself on the same scales placed on the same floor surface. Uneven floors may affect the readings.
- Always weigh yourself without clothing or footwear and before meals. The first thing in the morning is the best time.
- Your scales round up or down to the nearest 100g. If you weigh yourself twice and get two different readings, your weight lies between the two readings.
- Clean your scale with a damp cloth but do not allow water to get inside the scales. Do not use any chemical cleaning agents.
- Do not allow your scales to become saturated with water as this can damage the electronics.
- Remove the batteries if the scales are not going to be used for a long period of time.
- Treat your scales with care, it is a precision instrument. Do not drop or jump up or down on them.

PRODUCT SPECIFICATION

Model	EPS-26B/WH
Capacity:	up to 180kg
Graduation:	0.1kg
Power:	2x1.5V AAA battery (not included)

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

