

miniZoom

MVC26WH

elit
electronics



MINI VACUUM CLEANER
INSTRUCTION MANUAL

elit-electronics.com



Please read instructions carefully before using the product and keep it in a safe place.

IMPORTANT SAFETY INSTRUCTIONS

- Please read all the contents of this manual carefully before using this product.
- Keep this manual in a safe place. If you transfer the product to a third party, please ensure the instructions are included with the machine.
- Any operation that does not conform to the instructions in the manual may result in serious personal injury, property damage or product damage.
- Loss caused by failure to follow the instructions in this product guide, our company does not accept legal responsibility.

NOTE

**This product is not waterproof. Do not use it to inhale water or damp dust.
Do not use it to absorb construction waste or heavy metal dust.**

Personnel safety

- Please read these instructions carefully to avoid accidents and possible damage to the product.
- Be careful when operating the product to avoid danger.
- Do not stand or sit on this product.
- Keep this product in a safe place and store it out of reach of children and people who are unable to judge environmental hazards.
- Do not store this product in a high place to avoid the risk of accidental fall.


Product safety instructions

- This product is not suitable for people with physical, sensory or intellectual disabilities, or people who lack experience and common sense (including children), unless they are supervised or instructed by others to ensure that it can be used safely.
- This product is only suitable for use in a dry environment. Do not use it in a humid environment.
- Do not use the product to suck up high-temperature substances (such as cigarette butts, matches, or hot ash), ultra-fine substances (such as stone ash, cement, wood chips, gypsum powder, ash, toner, etc.), large sharp objects (such as glass, nails, pins, etc.), dangerous goods (such as solvents, detergents, etc.), chemical substances (such as acidic substances, detergents, etc.), flammable and explosive liquids (such as gasoline, alcohol products).
- Keep the product's air passage and moving parts away from hair, loose clothing, fingers and other parts of the body. Do not aim airflow channels or tools at your eyes or ears.

- Please check the cleaning area before use. If you find large pieces of paper, paper balls, plastic cloth, sharp objects, or items thicker than the straw diameter, please remove them in advance to avoid blockage of the suction pipe, which will affect the use of the product.
- When using, if you find leakage, excessively high motor temperature, abnormal sound, overheating, odor, weak suction, etc., you should stop immediately.
- Please check the dust cup regularly. If there is a lot of garbage inside, please clean it up in time. Keep the ventilation hole unobstructed to avoid reduced suction, motor overheating, and shortened service life of the handheld wireless vacuum cleaner.
- When cleaning this product, do not use lubricants, detergents, polishes, etc. on any part.
- When the machine is faulty, do not repair it yourself. Please contact our after-sales department for help.
- This product is a power tool. Do not leave the handheld wireless vacuum cleaner running unattended when it is in use.

Product parts:

- (1) Air Inlet
- (2) Dust Bin
- (3) HEPA Filter
- (4) Body
- (5) Indicator light
- (6) Power/Speed
- (7) Charging Port
- (8) USB charging cable
- (9) Brush
- (10) Suction nozzle
- (11) Bag

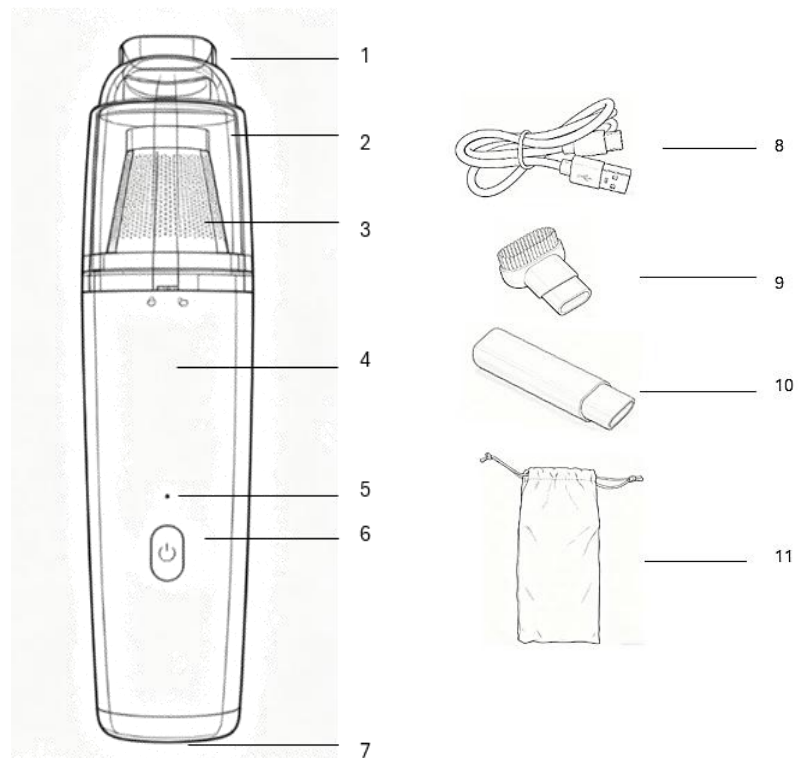

Preparation before use

- Make sure the components of the vacuum cleaner are in place.
- Check if the battery is fully charged to ensure that the product works properly.

Charging instructions

- Plug the adapter into the charging dock* and plug the other end into a power outlet. (USB adapter not included)
- Do not switch it on while charging.

NOTE

All washable parts can be placed in the main unit after they have been dried.

Daily storage

- When not using the machine for a long time, please keep the machine in a cool and dry place. Do not place the machine in direct sunlight or wet. In the realm.
- When storing the unit for a long time, please charge and discharge it for at least three months.

Common troubleshooting

When the host runs abnormally, please refer to the following table to solve the fault.

Fault phenomenon	possible reason	Processing method
The machine is not working	1. low battery 2. The machine power switch is not pressed	1. Timely charging 2. Press the power switch
Machine suction becomes smaller	1. Dust cup metal filter or HEPA filter is blocked 2. The machine is blocked at the mouthpiece	1. Clean the dust cup metal filter or HEPA filter 2. Clear the blockage at the mouthpiece
Too much noise	1. The dust cup is full 2. The machine is blocked at the mouthpiece 3. The dust cup filter assembly or HEPA filter is blocked 4. No filter components installed	1. Stop using and clear the blockage 2. If there is still an abnormality, please contact after sales 3. Install the filter assembly

Product Specification

Model	MVC26WH
Rated input	5V, 2A
Rated Power	60W
Suction	4.5~5kpa
Dust cup	0.2L
Charging time	≈ 4hours
Working voltage	7.4V
Battery capacity	1800mAh x 2
Using time after full charge	≈ 35min

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these change.

