

SC-26B

elit
electronics

EN

MULTIFUNCTIONAL STEAM CLEANER
INSTRUCTION MANUAL

elit-electronics.com



Please read instructions carefully before using the product and keep it in a safe place.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, or injury:

- Not allowed to be used as a toy.
- Do not use damaged cords or plugs.
- Do not use the steam cleaner if it has been dropped, damaged, left outdoors, or dropped into water.
- Do not service the steam cleaner while it is running.
- Avoid contact with hot surfaces.
- Burns may result from contact with hot metal parts, hot water, or steam. Do not turn upside down as there may be hot water in the appliance.
- Never aim the steam directly at anyone, hot steam can cause burns.
- Do not expose to rain.
- Store indoors.
- Do not place or store the appliance in a place where it may be dropped or pulled into a sink or bathtub.
- When not in use and before performing maintenance or troubleshooting, remove the plug from the outlet.
- Close supervision is mandatory for any device used by or near children.
- Do not leave the machine unattended while operating.
- Do not connect the steam cleaner to an electrical outlet when not in use.
- Do not put anything in the gas outlet. Do not use with the outlet blocked.
- Do not connect the steam cleaner to an electrical outlet when not in use.
- When unplugging the power cord, you should unplug it by grasping the plug instead of the power cord.
- Do not use the appliance in an enclosed space filled with vapors released by oil-based primers, paint thinners, certain moth-repellent substances, flammable dust, or other explosive or toxic vapors.
- Not for heating purposes.
- Do not use for any purpose other than those described in this user guide. Use only accessories recommended by the manufacturer.
- Do not add cleaning liquids, scented perfumes, oils, or any other chemicals to the water used in this appliance, as this may damage the appliance or make it unsafe to use. Use plain tap water or distilled/purified water.
- To prevent the risk of electric shock, do not immerse any part of the machine in water or other liquids.
- When using a steam cleaner, be aware that the force and heat of the steam may damage certain surfaces or textiles.
- Always test in a small hidden area of the material you want to steam clean. Shiny plastics darken, and fabrics such as acrylic, velvet, and linen react sensitively to the temperature of steam.

CAUTION:

To reduce the risk of injury from steam, never point the product at people, animals, or electrical outlets.

Do not add anything other than cold water, as this will damage the heating element and void the warranty.

PRODUCT OVERVIEW

- (1) Spray nozzle
- (2) Rubber Cap
- (3) Filling hole
- (4) Power button
- (5) Steam knob
- (6) Indicator light
- (7) Water tank
- (8) Water plug (bottom)
- (9) Hose



ACCESSORIES

- (1) Brass Brush
- (2) Small Nylon Brush
- (3) Large Nylon Brush
- (4) Small Shovel
- (5) Big Shovel
- (6) Needle
- (7) Rubber Rings
- (8) High-Pressure Nozzle
- (9) Scraper
- (10) Window Scraper
- (11) Towel Cover



INSTRUCTION HOW TO USE

1. Make sure that the steam cleaner is not plugged into a power source before filling water.
2. Open the water rubber cap.
3. Filling appropriate amount of water, do not fill to the top, and cover the water rubber cap.
4. Connect the steam cleaner to a power source.
5. Choose a steam nozzle or brush according to your cleaning needs and plug it to the spray nozzle.
6. Press the power button to turn on the steam cleaner.
7. Wait 15 seconds for the steam cleaner to start warming up.
8. Turn the steam knob to adjust the amount of steam coming out of the nozzle, 3 steam levels are available, low, middle and high.
9. Press the power button to turn off the steam cleaner when you finish cleaning. Unplug the power cord before refilling the water.
10. Drain the tank by pulling out the water plug at the bottom of the tank after each use.
11. Allow the steam cleaner to cool down completely before cleaning or storing. and store in a dry place.

Important: The steam cleaner should be in a power-off before the first water filling or refilling.

FEATURES OF PRODUCT

Your steam cleaner utilizes pressurized steam to remove hard grease dirt, and grime. Steam is nature's purest and most powerful cleaner and safely cleans all the hard stuff in your home without the use of harsh chemicals surface, so it is very environmentally friendly. The device has various accessories, so it can be used in a variety of scenarios, such as:

1. Interior decoration, cement floor, tile and stove.
2. Use the extended spray bar to easily reach tight spaces.
3. Refresh fabrics, curtains, and bedding.
4. Deal with windows, mirrors, and glass doors.
5. Treat hard surfaces such as counters, sinks, and shower door tracks.
6. Handle kitchens, appliances, household surfaces, cars.
7. Provide degreasing, deep cleaning, disinfection and disinfection functions.

MAINTENANCE AND CARE

To ensure continuous high-temperature steam cleaning, it is critical to address limescale build-up in the steam cleaner. If you notice a decrease in steam output or a clogged steam outlet, follow these simple steps:

1. Mix citric acid with water in a ratio of 1:5 and inject into the water tank.
2. Remove the nozzle and adjust the knob to adjust the steam volume to the highest.
3. Start the machine and run normally for 5-10 minutes.
4. After descaling, inject the water tank with clean water and run normally for 5-10 minutes.
5. Turn off the machine.

Regular maintenance will keep your steam cleaner performing at its best.

PRODUCT SPECIFICATION

Model	SC-26B
Rated Power	1500W
Pressure	4 bar
Water tank	1.25l
Steam temperature	~ 100°C

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an

equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these change.