NutriFry AF25L

EN

AIR FRYER OVEN
INSTRUCTION MANUAL

elit-electronics.com

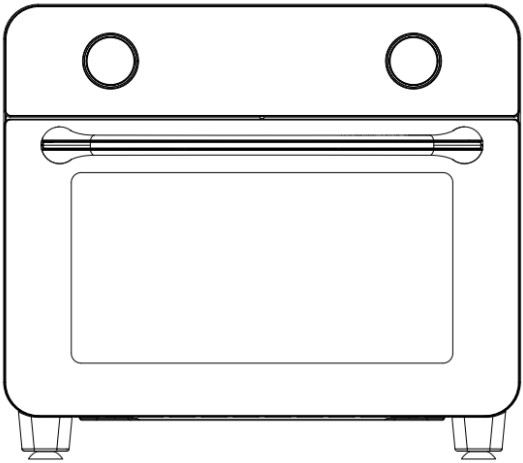

Read all the sections of this booklet and follow all the instructions carefully.

IMPORTANT SAFETY INSTRUCTIONS

DESIGNED FOR HOUSEHOLD USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children under 8 years of age must be kept away from the appliance and its power cord.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- Wash all parts that come into contact with food in warm water with a little kitchen detergent with a soft sponge. Rinse in clean water and wipe dry. Follow the instructions in the “Care and maintenance” section.
- This appliance is not designed to be controlled using an external timer switch or a remote control.
- This product is designed for household use only. It is not intended for use in areas such as:
    - staff kitchens in stores, offices and other workplaces;
    - hotel or motel rooms and other living areas;
    - agricultural farms;
    - bed and breakfast establishments.
- The appliance must not be immersed during cleaning.

WARNING: Avoid spilling on the plug.
WARNING: Incorrect use may lead to injury.

CAUTION: Hot surface – do not touch any sections or surfaces of the appliance that may become hot or the heating components od the appliance.

WARNING: Keep the appliance away from flammable materials.

- Before connecting the appliance to the mains socket, make sure that the nominal voltage indicated on the label of the appliance matches the voltage of the socket to which you want to connect the appliance.
- Only plug the appliance into a correctly grounded socket.
- Do not connect the appliance to a mains socket unless it is properly assembled.
- Do not use the appliance in an industrial environment or outdoors.The appliance is designed for grilling food.
- Do not use it for any other purposes than those intended.
- Do not place the appliance on windowsills, sink drip tray or on unstable surfaces. Always place the appliance on a stable, flat and dry surface.
- Fully unwind the power cord before use.
- Do not leave the power cord hanging over the edge of a table or countertop or allow it to touch a hot surface or to become tangled up.
- Do not put heavy objects on the power cord.
- For safety reasons, we recommend connecting the appliance in an independent electrical circuit separated from other appliances.
- Do not use adapter plugs or extension cables to connect the appliance to a power socket.
- To prevent electric shock, do not immerse the appliance, its base or the power cord in water or other liquids.

- Do not place the appliance on or near an electric or gas stove, do not place it in the vicinity of naked fire or appliances that are sources of heat.
- Use the appliance with the accessories that came with it.
- Make sure the appliance is correctly assembled before use.
- During operation, sufficient space for air circulation above and on all sides of the appliance should be provided.
- Do not use the appliance near flammable materials such as curtains, kitchen towels, etc.
- The temperature of accessible surfaces may be higher if the appliance is in operation. Take care not to touch heated surfaces. Take extra care as heated surfaces remain hot for several minutes after the appliance has been switched off.
- Do not use sharp or metal utensils to remove the finished dish/food. Otherwise, the non-stick surface could be damaged.
- Do not put food / food wrapped in paper, cardboard, plastic, textiles or other flammable material into the appliance.
- Do not cover the vents while the appliance is in operation.
- If you need to remove the lid during operation, be extra careful not to scratch yourself on the escaping hot steam. There is a risk of serious burns.
- Do not use the appliance as an oil fryer.
- Always switch the appliance off with the on/off button and unplug it from the mains socket when left unattended, after use and before removing accessories, cleaning or moving it.
- Allow the appliance to fully cool down before moving, cleaning or storing it.
- Do not use the appliance to store foreign objects.
- When disconnecting the power cord from the socket, always pull the plug, not the cord. Otherwise, damage to the power cord or the socket could occur.

- Do not use the appliance if it is not working correctly, if it was dropped on the floor, if it is damaged or has been submerged in water. Contact an authorized service center.
- We recommend that you check your appliance regularly. Do not use the appliance if it is damaged in any way or if the power cord or plug is defective. All repairs or adjustments must be performed at the nearest authorized service center.
- Any maintenance other than standard maintenance must be performed at an authorized service center.

Safety Information

- This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and will be more resistant to breakage. Be aware that tempered glass can still break, especially around the edges. Avoid scratching the door surface or nicking the edges.
- Do not use outdoors. This appliance is for HOUSEHOLD USE ONLY.
- Do not use this oven for anything other than its intended purpose.

PRODUCT OVERVIEW

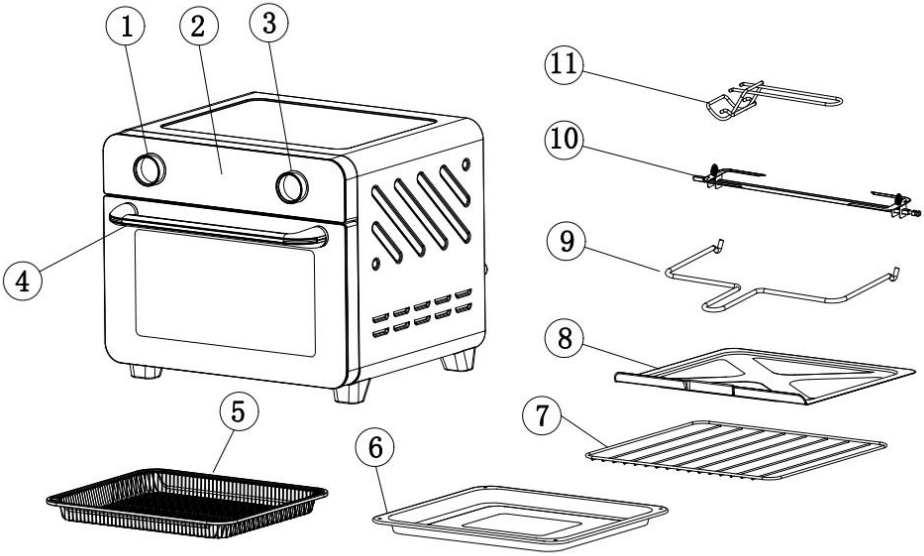

1. Time display & control knob
2. Touch panel
3. Temperature display & control knob
4. Door handle
5. Air fry basket
6. Bake tray
7. Wire rack
8. Crumb tray
9. Rotisserie handle
10. Rotisserie
11. Tray handle

BEFORE FIRST USE

Before using your electric oven for the first time, be sure to:

- Read all the instructions in the manual.
- Make sure the oven is unplugged.
- Wash all accessories in warm soapy water.
- Rinse and dry thoroughly all accessories and then re-assemble them in the oven.
- Plug the oven in the mains socket and then you are ready to use the oven.
- Once reassembled for the first time, it recommends that you run the oven at the highest temperature (230°C) on the Air fry function for 15 minutes to burn off the packing residue. This will remove all traces of odor that will occur on the first use.

Note: When using the oven for the first time, the oven may produce an odor and emit smoke. The oven is burning off the excess oils in the heating elements and this is normal.

Please familiarize yourself with the following oven functions and accessories before first use:

- **Bake tray:** For use when broiling or roasting meat, poultry, fish or various other foods.
- **Wire rack:** Use for toasting bread, bagels and pizzas. When using this accessory for foods that may drip grease, juices or crumbs, always remember to place the bake tray under the wire rack.
- **Air fry basket:** Use for cooking oil-free fried foods and broiling. When using this accessory for foods that may drip grease, juices or crumbs, always remember to place the bake tray under the Air fry basket.
- **Crumb tray:** Always keep the crumb tray at the very bottom of the oven while cooking to collect crumbs and drips during cooking.
- **Rotisserie:** Use for cooking whole chickens or various other foods.

- **Time display & control knob:** The max. time is 9hrs. It displays the default setting. You can turn the knob to left/right to adjust the cooking time.
  NOTE: The time can't be adjusted during cooking.
- **Temperature display & control knob:** The temperature range is 35-230℃. It displays the default setting. You can turn the knob to left/right to adjust the temperature.
  NOTE: The temperature can't be adjusted during cooking.

FUNCTIONAL BUTTONS

There are touch control buttons for fan, rotisserie, lamp, start/pause.

- **Fan button** : The fan is activated by default. Finger touches this button to turn on/off the fan.
  NOTE: The fan cannot be selected when selecting the mode "Fermentation". The fan cannot be turned off when selecting the modes "Air fry/Pizza/Steak/Chips/Roast/Fish".
- **Rotisserie button** : Rotisserie function is activated by default when selecting the modes "Chips" and "Roast ". Finger touches this button to turn on/off the rotisserie.
  NOTE: Enter DIY mode, you can turn on/off the rotisserie manually. Besides the modes "Chips/Roast/DIY", the other modes cannot select rotisserie function.
- **Lamp button** :Your oven has an interior light and it is defaulted to turn off when plugging in the oven. Finger touch this button to turn on /off the lamp manually during cooking process.This facilitates easy viewing of the inside of your oven.
  NOTE: The lamp will automatically turn off after 5 mins,press the lamp button to turn on.
- **Start/Pause button** : Finger touches this button to start /pause the program. Press one time to start, press again to pause.

NOTE: Press and hold ⏯ for a while, return to the initial status,press this button for 2 seconds to switch the machine off completely.

COOKING MODES

There are 13 cooking modes: Air fry /Toast /Pizza /Steak /Chips /Cookies /Roast /Fish /Cake /Dehydrate /Fermentation /Defrost/DIY.

Finger touches the icon to select the cooking modes, if finger touches the selected icons again, it will go back to initial status.

Modes	Default Temp (℃)	Temp. Scope (℃)	Default Time (min)	Time Scope
Air fry	210	60-230	25	1min-2h
Toast	180	150-220	6	1min-1h
Pizza	200	150-230	10	1min-1h
Steak	200	160-200	15	1min-2h
Chips	220	180-230	25	1min-1h
Cookies	170	150-200	15	1min-1h
Roast	210	180-220	30	1min-2h
Fish	200	170-210	18	1min-1h
Cake	180	160-220	32	1min-2h
Dehydrate	68	45-68	5h	30min-9h
Fermentation	40	35-45	30	30min-9h
Defrost	50	45-65	25	10min-1h
DIY	210	60-230	25	1min-2h

NOTE: Please adjust the cooking time based on the type of food to be cooked as well as the food weight or size.

OPERATION

1. Place the oven on a clean, flat and heat-resistant surface.
   Ensure that there is enough ventilation around the oven.
   Ensure that the oven is completely dry before use.
   The oven should not be placed on an untreated wooden surface.
2. Plug in the oven. For best results, it recommends that you preheat the oven for 15 minutes at 230°C.

CAUTION: The surface of the oven will get hot during and after use. Keep your hands safe by not touching the surface.

Always use extreme care when removing bake trays, wire rack or any hot container from a hot oven. Always use the rack handle, or an oven mitt when removing hot items from the oven.

3. Select the oven accessory for your recipe. Place the food to be cooked on the accessory.
4. Place the accessory with food into the appropriate shelf position in the oven and close the door.
5. Select a preset cooking mode.
6. Set the temperature.
   Turn the knob to increase or decrease the temperature.
   The temperature range is 35-230℃.
   See the table "Cooking modes" for related parameters.

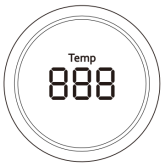

7. Set the time.
   Turn the knob to increase or decrease the cooking time.
   The maximum cooking time is 9 hours.
   See the table "Cooking modes" for related parameters.

8. Start cooking.
   Press ⏯ to start cooking cycle. To pause cooking, press ⏯ again. To cancel cooking, press and hold ⏯ for a while.
   The time starts to count down, indicating that the oven starts to run.

9. When the cooking process is complete and the cooking time has elapsed, your oven will beep three (3) timers and “0:00” will flash on the time display.
   You can also press and hold ⏯ for a while to turn off the oven.

USING THE PRESET MENU FUNCTION

1. Place the food to be cooked on the air fry basket or bake tray.
2. Insert the air fry basket or tray into the middle position of the oven. Close the door.
3. Touch the food program you want to cook, the selected mode is displayed. The default temperature and time will be displayed.
4. You can set the desired temperature and cooking time using the temperature control and time knob.
5. Press ⏯ to start cooking.
6. When the cooking is finished, the oven will beep and the time display will show “0:00”.
7. Open the door. Always remove food with oven mitts/tray handle as the food and oven are very hot.

USING THE ROAST FUNCTION

1. Secure the whole chicken with its weight cantered on the forks and tighten the screws.

- Insert the first thumbscrew onto the rotisserie shaft by pointing inward. Secure the first rotisserie fork with thumbscrew provided.
- Place the rotisserie shaft across the center of the food that you are going to cook. Make sure the food is at the center before inserting the second fork onto the rotisserie shaft. Secure the second fork with the thumbscrew.

2. Place the rotisserie fork with the whole chicken in the oven. Close the door.

Insert the pointed end of the rotisserie fork into the rotisserie socket on the inner right side of the oven.	Place the rotisserie fork onto the support of the inner left side of the oven to allow the square end of the rotisserie fork fit into the notch of the support.

3. Touch the icon ”Roast”, the selected mode is displayed. The default temperature and time will be displayed.
4. You can set the desired temperature and cooking time using the temperature control and time knob.
5. Press ⏯ to start cooking.
6. When the cooking is finished, the oven will beep and the time display will show “0:00”.
7. Open the door and check the internal temperature of the food to ensure that it has cooked properly.

8. Remove the rotisserie fork with the rotisserie handle.
   - Hold the rotisserie handle in one hand and support it with the other.
   - Place the hooks on the handle underneath the rotisserie fork.
   - First, lift the left side of the rotisserie fork out of the support, pulling slightly towards yourself.
   - Then, gently remove the right pointed side of the rotisserie fork from the rotisserie socket and remove the food on the fork out of the oven.

USING THE DEHYDRATE FUNCTION

1. Place the food to be cooked on the wire rack or bake tray.
2. Insert the rack or tray into the middle position of the oven. Close the door.
3. Touch the icon ”Dehydrate”, the selected mode is displayed. The default temperature and time will be displayed.
4. You can set the desired temperature and cooking time using the temperature control and time knob.
5. Press ⏯ to start cooking.
6. When the cooking is finished, the oven will beep and the time display will show “0:00”.
7. Open the door. Always remove food with oven mitts/tray handle as the food and oven are very hot.

USING THE FERMENTATION FUNCTION

1. Place the food to be cooked on the wire rack or bake tray.
2. Insert the rack or tray into the middle position of the oven. Close the door.
3. Touch the icon ”Fermentation”, the selected mode is displayed. The default temperature and time will be displayed.
4. You can set the desired temperature and cooking time using the temperature control and time knob.
5. Press ⏯ to start cooking.

6. When the cooking is finished, the oven will beep and the time display will show “0:00”.
7. Open the door. Always remove food with oven mitts/tray handle as the food and oven are very hot.

USING THE DEFROST FUNCTION

1. Place the food to be cooked on the bake tray.
2. Insert the tray into the middle position of the oven. Close the door.
3. Touch the icon ”Defrost”, the selected mode is displayed. The default temperature and time will be displayed.
4. You can set the desired temperature and cooking time using the temperature control and time knob.
5. Press ⏯ to start cooking.
6. When the cooking is finished, the oven will beep and the time display will show “0:00”.
7. Open the door. Always remove food with oven mitts/tray handle as the food and oven are very hot.

USING THE DIY FUNCTION

1. Place the food to be cooked on the wire rack or bake tray.
2. Insert the rack or tray into the middle position of the oven. Close the door.
3. No need to select cooking mode , your oven enter DIY mode after plug in.
   The default temperature and time will be displayed.
4. You can set the desired temperature and cooking time using the temperature control and time knob.
5. Press ⏯ to start cooking, there is no cooking mode icon displayed.
6. When the cooking is finished, the oven will beep and the time display will show “0:00”.
7. Open the door. Always remove food with oven mitts/tray handle as the food and oven are very hot.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water.
- After each, use a damp cloth to clean the interior and exterior of the oven and door, then dry them thoroughly.
- Wash all the accessories in warm soapy water with a sponge or cloth. Rinse and dry thoroughly.
- Never use abrasive or chemical cleaning agents.
- Surfaces in contact with food should be cleaned regularly to avoid cross contamination from different types of food, the use of a damp cloth is advisable when dealing with surfaces that come into contact with food.
- Correct food hygiene practices should always be followed at all times to avoid possibility of food poisoning /cross contamination.
- Dry all parts and surfaces thoroughly before use.
- Make sure that all parts and surfaces are completely dry before plugging in the appliance.

SPECIFICATIONS

Model:	NutriFry AF25L
Rated voltage range:	220–240V~
Rated frequency:	50–60Hz
Rated power input:	2250W
Temperature control:	35-230°C
Capacity:	25L

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.

CE This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.