omniClean SERIES

zoomOne

CORDLESS VACUUM CLEANER
INSTRUCTION MANUAL

elit-electronics.com

Please read this user manual carefully to fully understand the usage of the Cordless Vacuum.
Keep the manual for future reference since it contains important information.

SAFETY INSTRUCTIONS

The vacuum cleaner is specially used for household purposes, please do not use it for commercial or other purposes.

1. Please don't use the vacuum cleaner to suck detergent, kerosene, glass waste, needles, cigarette ash, moisturized dust, sewage, matches, similar articles or any liquid.
2. Please do not use the vacuum cleaner to suck cement, gypsum powder, wall power and similar small particles, or toy, paper filler and other larger objects, which can cause vacuum cleaner clogging, motor burnout and another fault.
3. Please do not use the vacuum cleaner near the fire source and other high-temperature places.
4. When the vacuum cleaner is used, please pay attention to install HEPA and rolling brush properly before operating the unit.
5. When the vacuum cleaner is used, please note that the suction inlet cannot be clogged and the rolling brush cannot be blocked, otherwise motor failure may be caused.
6. Please do not dump or splash water or other liquid into the machine, to avoid short-circuit and burn-out of machine.
7. When cleaning the vacuum cleaner filters, please remove and wash them with water if recommended by the manufacturer; when you need to use them, please install the dried filters into the vacuum cleaner. Do not use the wet filters, otherwise it may burn out the machine due to the short circuit.
8. Please use dry cloth for cleaning the vacuum cleaner, do not use gasoline, banana oil etc. otherwise shell cracking or fading will be caused. Please do not use and store the machine in extremely adverse conditions, such as extreme temperatures. Use the vacuum cleaner in room temperature of 5°C~ 40°C. Please store it in a cool and dry place. Sunlight exposure for long time should be prohibited.
9. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the outlet is grounded.
10. Do not use the device if it has been dropped or if there are any visible signs of damage.
11. Do not try to repair the appliance by yourself. Contact official technical support service.
12. Do not use any accessory that has not been recommended by the manufacturer, as they might cause injuries or damage.
13. Turn off and unplug the appliance from the mains supply when it is not going to be used for a long period of time, before cleaning or repairing, before attaching components and before removing the battery.
14. Never modify the charger in any way.
15. Do not use any battery that has not been provided with the original product.

16. This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
17. Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
18. Children under 8 years of age must be kept away from the appliance and its power cord.

BATTERY INSTRUCTIONS

- This appliance includes Li-ion batteries, do not incinerate or expose them to high temperature, as they may explode.
- Leaks from the battery or battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid gets into contact with skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations.
- Avoid contact between the battery and small metallic objects such as paper clips, coins, keys, nails or screws.
- Before a new battery is used or the battery is used for the first time after long-term storage, fully charge the battery. When the device is stored and not used for long periods of time, ensure that the battery pack is fully charged and ensure that the battery is charged and discharged at least once every three months.

PACKAGE CONTENT

Main motor	Foldable Tube	Electric Brush with Carpet roller	Bed Brush
Pet Brush	Hose for Pet Brush	Long Crevice Nozzle	2in1 Flat Nozzle
Additional Soft roller	HEPA filter	Adapter	Battery	Wall Mount

PRODUCT OVERVIEW

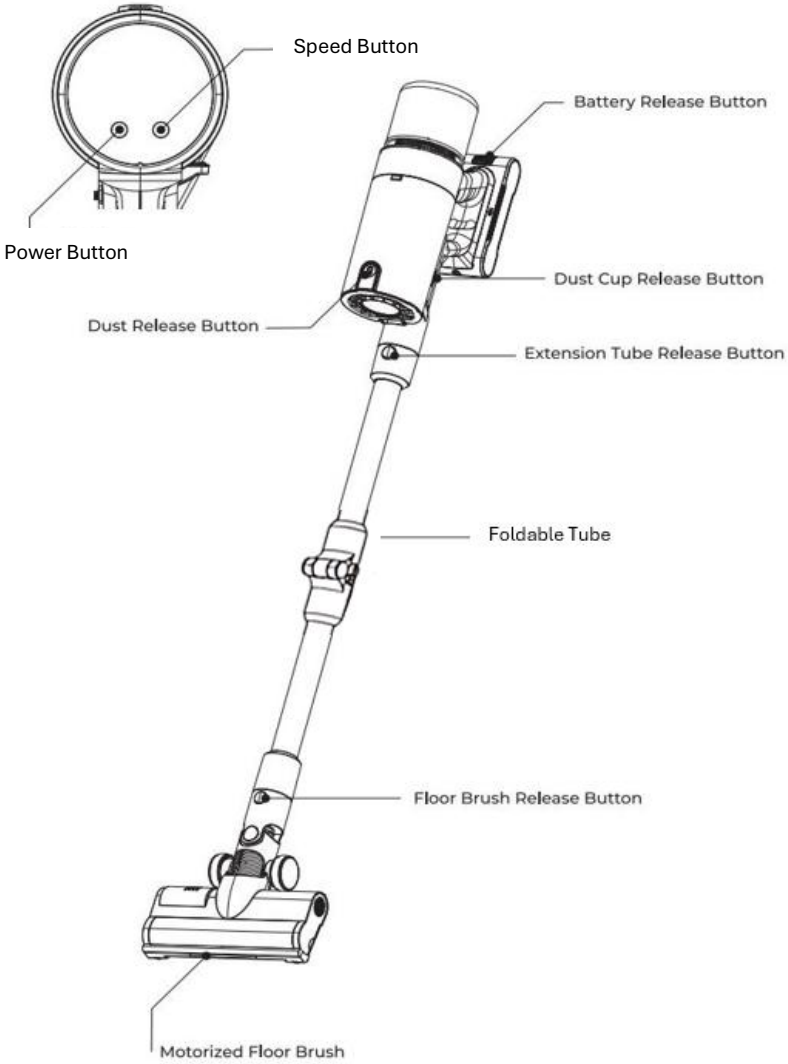

DISPLAY DESCRIPTION

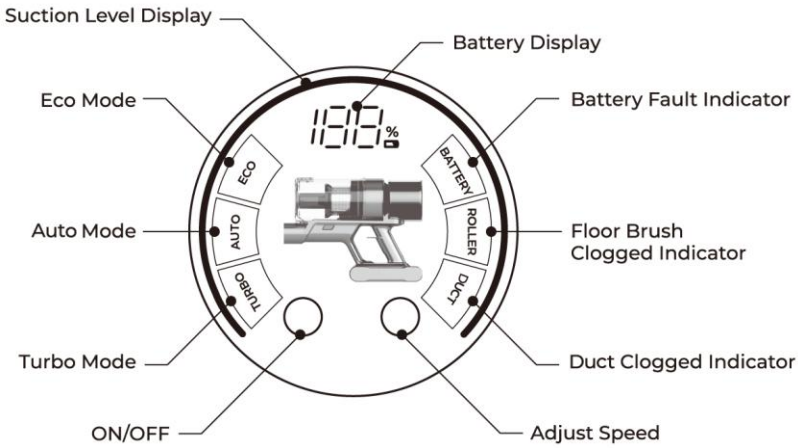

CHARGING THE BATTERY

- The vacuum is powered by the built-in lithium battery. Before first use, charge the battery for at least 5 hours.
- During the work of the machine, when the power display is only 10%, the power display number will flash. This is a reminder that the battery is low and should be charged in time to avoid affecting the use.
- You can charge the battery in two ways - see below Method 1 & Method 2
- The vacuum cannot work while charging.
- The vacuum cannot be charged when the ambient temperature is below 10°C or above 45°C.

CHARGING METHODS

Method 1:

The product can be charged on the unit. The digital screen will show the charging process, when at 100%, the battery is full.

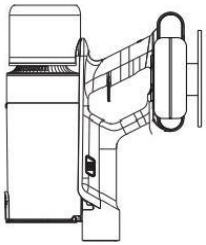

Method 2:

The battery package can be pulled out and charged separately. The battery indicator light will be flashing in green, When the battery is fully charged, the green light is always on.

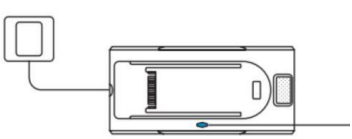

ASSEMBLING

1. Install the battery pack

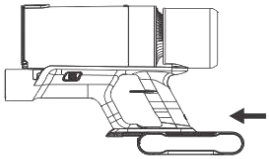

2. Install the cleaning accessory you prefer

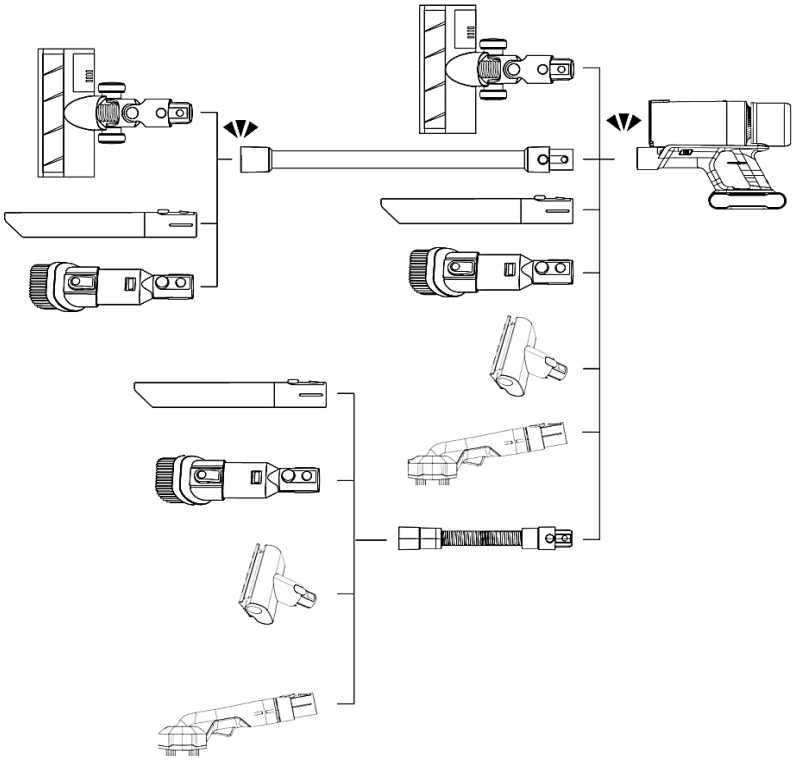

OPERATION METHOD

1. Press the Power button, the machine will start to work. Press the button again to shut down the machine.

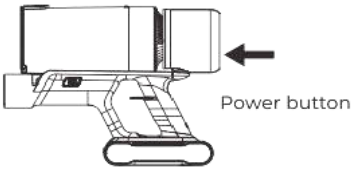

Warning: Do not use the Cordless Vacuum cleaner without the removable filter or dust cup not in position, make sure that the battery is fully charged and fixed in place.

2. You can choose between 3 suction powers by touching the speed control button.

ECO (up to 60 min) **AUTO** (up to 30 min) **TURBO** (up to 17 min)

When the machine is working at any suction, press the ON/OFF button, the machine will stop working.

ABNORMAL INDICATOR

(1) When the battery level is under 10%, the battery indicator on the screen will start to flash in red. The vacuum cleaner should be charged as soon as possible.

(2) When the brush roller is blocked, the LED light on the motorized brush goes out, and the red brush roller indicator light keeps flashing until it is manually turned off.

(3) When the motor or tubing is clogged, the red cup full indicator flashes for 10 seconds and then goes out.

(1) (2) (3)

INSTALLATION

Hold the wall mount against the wall through the two fixing screw holes and fix it onto the wall with screws and then place the vacuum cleaner on the wall.

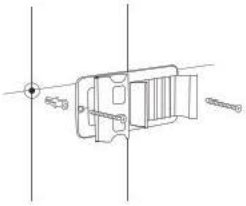

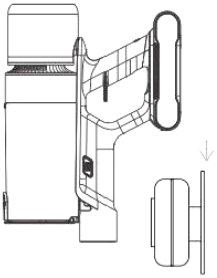

Warning:

Please make sure there is no gas, water or electrical cables and wires behind the mounting area. To avoid the dock dropping down, please make sure it must be installed firmly.

CLEANING AND MAINTANANCE

When the filters are blocked due to excessive dust, they must be cleaned and if necessary, they can also be replaced.

To ensure maximum efficiency, it is suggested to clean the filters regularly (at least twice a month) and replace the filters at least once a year.

Both cleaning and replacement depend on use. More frequent cleaning may be required when vacuuming fine dust or using the machine intensively.

CLEAN THE MAIN BODY

- Turn off the power before cleaning the body.
- Please use neutral detergent, wipe the body with half-wet cloth.
- Please avoid sun exposure and store in a cool and dry place.

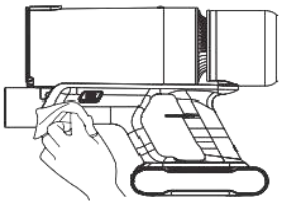

CLEAN THE DUST BOX

- Turn off the vacuum before cleaning it.
- Press the dust cup release button to empty the dust.
- When using, if the garbage in the dust cup exceeds MAX line, please empty it in time.

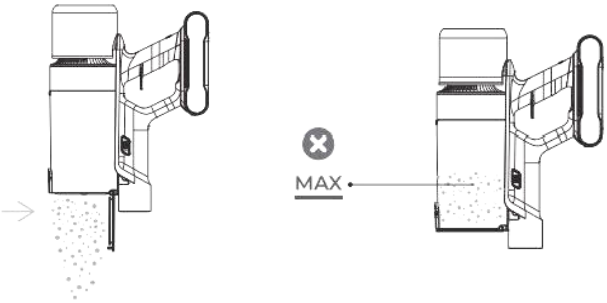

CLEAN THE FILTERS

- Remove the dust cup by pressing and holding the dust cup release buttons on the left and right sides of the handle.

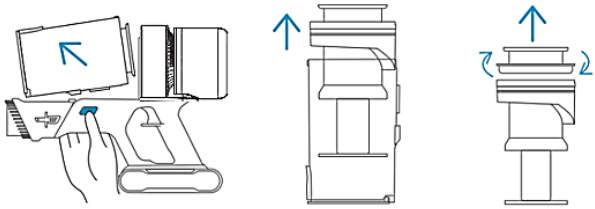

- Turn the inlet HEPA filter clockwise to release it.
- Pull out the metal filter compartment.
- Turn the outlet HEPA filter anti clockwise to release it.
- Shake off debris by tapping the filters against your trash container.

Wash the filters with cold water only, under a running tap. Repeat the washing filter until clean water runs. Do not immerse into water.
Tap the filter to remove any excess water and leave it to dry completely. Allow the filters to dry completely in a dry area with good air circulation for at least 24 hours, away from direct sunlight, heat sources like heating appliances etc.

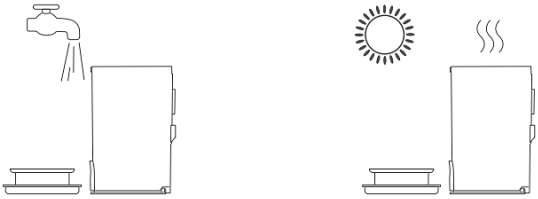

Make sure the filters are completely dry before installing them.

CAUTION:

- Do not clean the filters in a washing machine.
- Do not use a hair dryer to dry them.
- Never use the appliance without filters.

CLEAN THE MOTORIZED FLOOR BRUSH

(1) Turn off the vacuum, press the floor brush release button to remove the floor brush from the metal tube.

(2) Press the rolling brush release button to release the rolling brush locking strip.

(3) Take out the rolling brush locking strip and lift the rolling brush to remove.

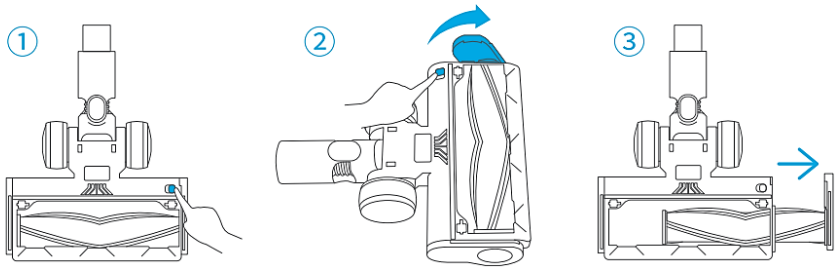

(4) Clean the rolling brush using scissors or other tools, rinse and then air-dry the rolling brush.

(5) Reinstall the rolling brush by inserting the fixed protruding end first, then clicking into place.

(6) Push the rolling brush locking strip in until you hear a click.

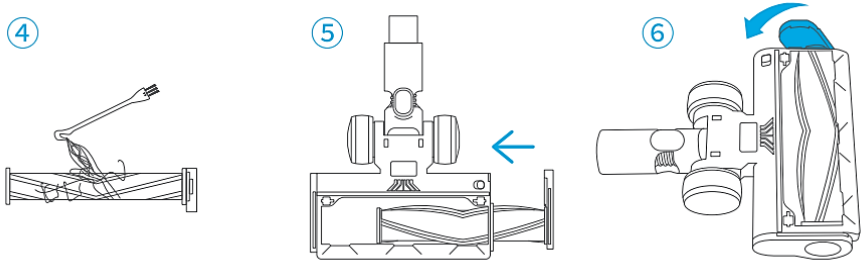

TROUBLESHOOTING

Switch off the appliance and disconnect the mains plug before addressing any faults! Failure to do so may result in injury or electric shock.

Problem	Possible causes	Solution
Appliance is not working	Battery is empty	Charge the battery
	Filters are dirty	Clean the filters, replace the HEPA filter if necessary
	Brush roller is blocked	Clean the brush roller and remove debris such as hair and fibres if necessary
Battery will not charge	Appliance or charging station is not correctly connected to a power socket	Connect the mains adaptor correctly to a functioning power socket
	Contact with charging station has not been established	Hang the hand-held appliance correctly in the charging station
Suction power decreases	Suction opening on the container is blocked	Clean the suction opening on the hand-held appliance and check the suction tube for any dirt.
	The dust container is full	Empty the dust container
	Filters are dirty	Clean the filters, replace the HEPA filter if necessary
	Brush roller is blocked	Clean the brush roller and remove debris such as hair and fibres if necessary
Vacuum is no picking up debris No suction or light suction	Dust box may be full	Empty the dust box
	Check for blockages	Clear crevice tool nozzle and floor brush from blockages; remove any string, hair etc. that may be wrapped around the rolling brush. Clear connection between the main unit and metal tube from blockages. Clear any debris from the metal tube.
	Check filters to see if they need cleaning.	Follow instructions for rinsing and completely airdrying the filters before reassembling.
Vacuum turns off on its own	Battery is low	Check the battery indicator lights and recharge if needed.
	Check for blockages	Empty the dustbin and clean the filters. Check the metal tube, accessories and openings and remove any blockages.
	Machine is overheated	Allow the main unit of the vacuum to cool for at least 4 minutes and restart the vacuum.

Filter cannot be inserted correctly	Filter not fitting properly in slot	Check filter and fitting are correct
	Brush roller not inserted correctly/blocked or flashes red	Check that the brush roller is correctly fitted and remove any string, carpet fibers or hair that may be wrapped around the rolling brush
Red flashing battery	Battery level is under 10%	Charge the battery as soon as possible.
	Suction blocked or flashes red 6 times	Check the brush rollers, suction tube and suction opening for dirt/blockages

SPECIFICATION

Product:	Cordless Vacuum Cleaner
Model:	zoomOne
Power:	450W BLDC
Battery:	29.6V 2200 mAh
Adapter Input/Output:	100-240 V~50/60Hz / 36V 500mA
Maximum suction power:	140±10W
Maximum vacuum power:	34Kpa

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, please consult your local authorities or your dealer for information on the correct method of disposal.

CE This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

The text, design and technical specifications may be changed without prior notice, and we reserve the right to make these changes.